

**LED INDICATORS:**

UTP LINK/ACT: INDICATE UTP AND FIBER LINK/ACT.

RED: 100 BASE-TX

AMBER: 10 BASE-T


BLINK: UTP AND FIBER LINK IS ESTABLISHED AND ACTIVITY IS ON UTP AND FIBER PORT.

SOLID: UTP AND FIBER LINK IS ESTABLISHED BUT NO ACTIVITY IS ON UTP AND FIBER PORT.

OFF: UTP AND FIBER LINK IS NOT ESTABLISHED.

OLI: RED: DC POWER IS ON BUT OPTICAL POWER IS MISSING OR AT INCORRECT LEVEL.

GREEN: DC POWER IS ON AND OPTICAL POWER IS AT PROPER LEVEL.

 <b>afi</b> american fibertek 120 BELMONT DRIVE SOMERSET N.J.	DATE: 06 MAR 2010		MRX-46-FX-ST CUSTOMER CONNECTION			
	ACAD FN.: MRX-46-FX-ST CC					
	SCALE:	DWG BY: CLQ	DWG. NO.:	SH.	OF	REV.: