



LED INDICATORS:

UTP LINK/ACT: INDICATE UTP AND FIBER LINK/ACT.

RED: 100 BASE-TX

AMBER: 10 BASE-T

BLINK: UTP AND FIBER LINK IS ESTABLISHED AND ACTIVITY IS ON UTP AND FIBER PORT.

SOLID: UTP AND FIBER LINK IS ESTABLISHED BUT NO ACTIVITY IS ON UTP AND FIBER PORT.

OFF: UTP AND FIBER LINK IS NOT ESTABLISHED.

FIBER LINK/ACT: NOT USED.

OLI: RED: DC POWER IS ON BUT OPTICAL POWER IS MISSING OR AT INCORRECT LEVEL.

GREEN: DC POWER IS ON AND OPTICAL POWER IS AT PROPER LEVEL.

 afi american fibertek 120 BELMONT DRIVE SOMERSET N.J.	DATE: 25 FEB 2010		RRX-46-FX-ST CUSTOMER ASSEMBLY DRAWING		
	ACAD FN.: RRX-46-FX-ST CC				
	SCALE: NONE	DWG BY: CLQ	DWG. NO.:	SH. OF	REV.: