



CC1 TO CC8 – CONTACT CLOSURE OUTPUT INDICATORS:
 GREEN INDICATES THE RESPECTIVE NORMALLY OPEN CONNECTIONS ARE CLOSED AND THE NORMALLY CLOSED CONNECTIONS ARE OPEN.
 OFF INDICATES THE RESPECTIVE CONNECTIONS ARE IN THE DEFAULT STATE(NORMALLY OPEN IS OPEN, NORMALLY CLOSED IS CLOSED)

OLI/DC PWR– OPTICAL LEVEL /DC POWER INDICATOR:
 GREEN INDICATES THE OPTICAL INPUT POWER IS WITHIN THE PROPER RANGE AND THAT DC POWER IS PRESENT.
 RED INDICATES THE OPTICAL POWER IS NOT WITHIN THE PROPER RANGE BUT DC POWER IS PRESENT.

LATCHING SELECT SWITCH:
 WHEN SWITCH IS UP(OFF), ALL CONTACT OUTPUT STATES REMAIN LATCHED(UNCHANGED) DURING LOSS OF OPTICAL CONNECTION AND/OR LOSS OF UNIT'S DC POWER. ONLY A COMMAND FROM MT/RT UNIT WILL CHANGE THE CONTACT OUTPUT STATES.
 WHEN SWITCH IS DOWN(ON), ALL CONTACT OUTPUT STATES WILL REVERT TO THE DEFAULT STATES WHEN THERE IS A LOSS OF THE OPTICAL CONNECTION AND/OR THE UNIT'S DC POWER.

RESET PUSH BUTTON:
 PRESSING THIS MOMENTARY PUSH BUTTON CAUSES ALL THE CONTACT OUTPUT CONNECTIONS TO SWITCH TO THEIR DEFAULT STATES WHEN THE UNIT IS NOT CONNECTED TO AN MT/RT UNIT.

CONTACT OUT CH1 TO CH 8:
 THESE PROVIDE 8 SETS OF BOTH NORMALLY OPEN AND NORMALLY CLOSED CONTACT CONNECTIONS.

 120 BELMONT DRIVE SOMERSET N.J.	DATE: 20 OCT 08		MR-81SL			
	ACAD FN.: MR-81SL CC		CUSTOMER ASSEMBLY DRAWING			
	SCALE: NONE	DWG BY: BLB/CLQ	DWG. NO.:	SH. OF	REV.:	CHK.: <i>SK</i>