

CONTACT TX/RX INDICATORS:

INDICATOR IS GREEN WHEN CONTACT IS CLOSED. OFF WHEN CONTACT IS OPEN.

AUDIO TX/RX INDICATORS:




INDICATOR IS GREEN WHEN PROPER SIGNAL LEVEL IS PRESENT. OFF WHEN SIGNAL MISSING OR AT AN INCORRECT LEVEL.

VLI - VIDEO LEVEL INDICATOR:


OLI - OPTICAL LEVEL INDICATOR:

SYNC - SYNC INDICATOR:

INDICATOR IS GREEN WHEN PROPER SIGNAL/LEVEL IS PRESENT. IT IS RED WHEN SIGNAL IS MISSING OR AT AN INCORRECT LEVEL.

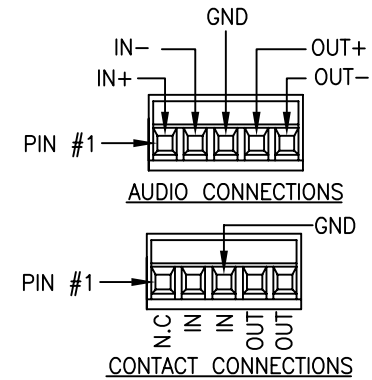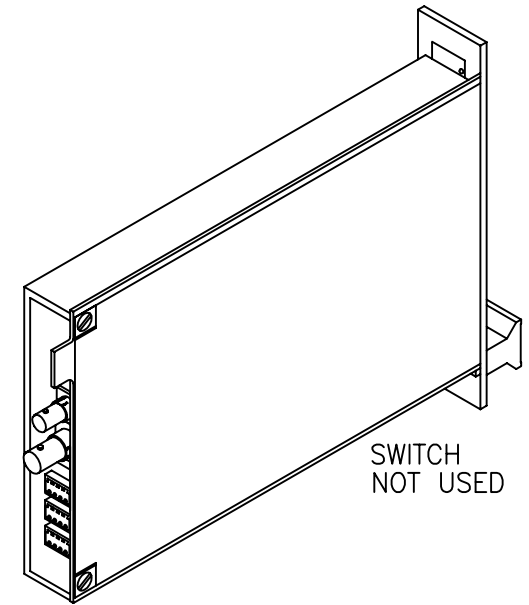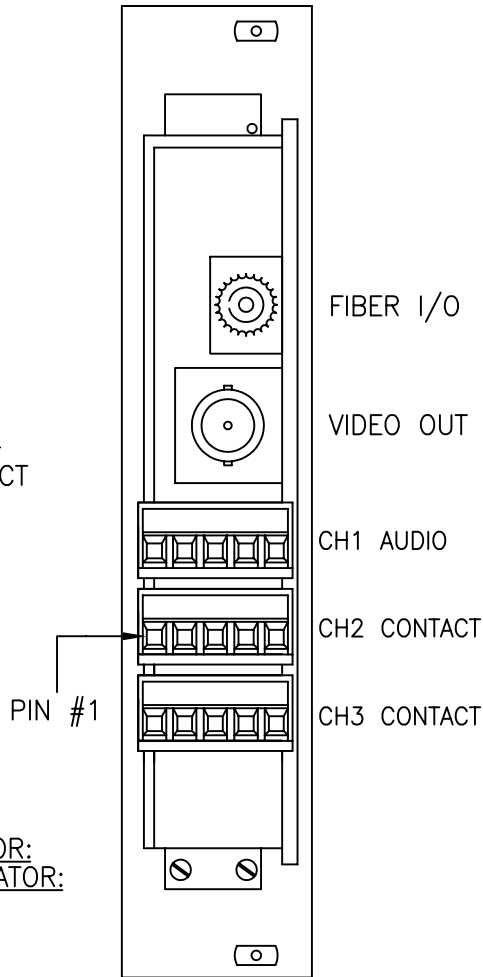

 afi american fibertek 120 BELMONT DRIVE SOMERSET N.J.	DATE: 30 OCT 2009		RR-89A-AX-SL CUSTOMER ASSEMBLY DRAWING		
	ACAD FN.: RR-89A-AX-SL CC				
	SCALE: NONE	DWG BY: CLQ	DWG. NO.:	SH. 1 OF 2	REV.:

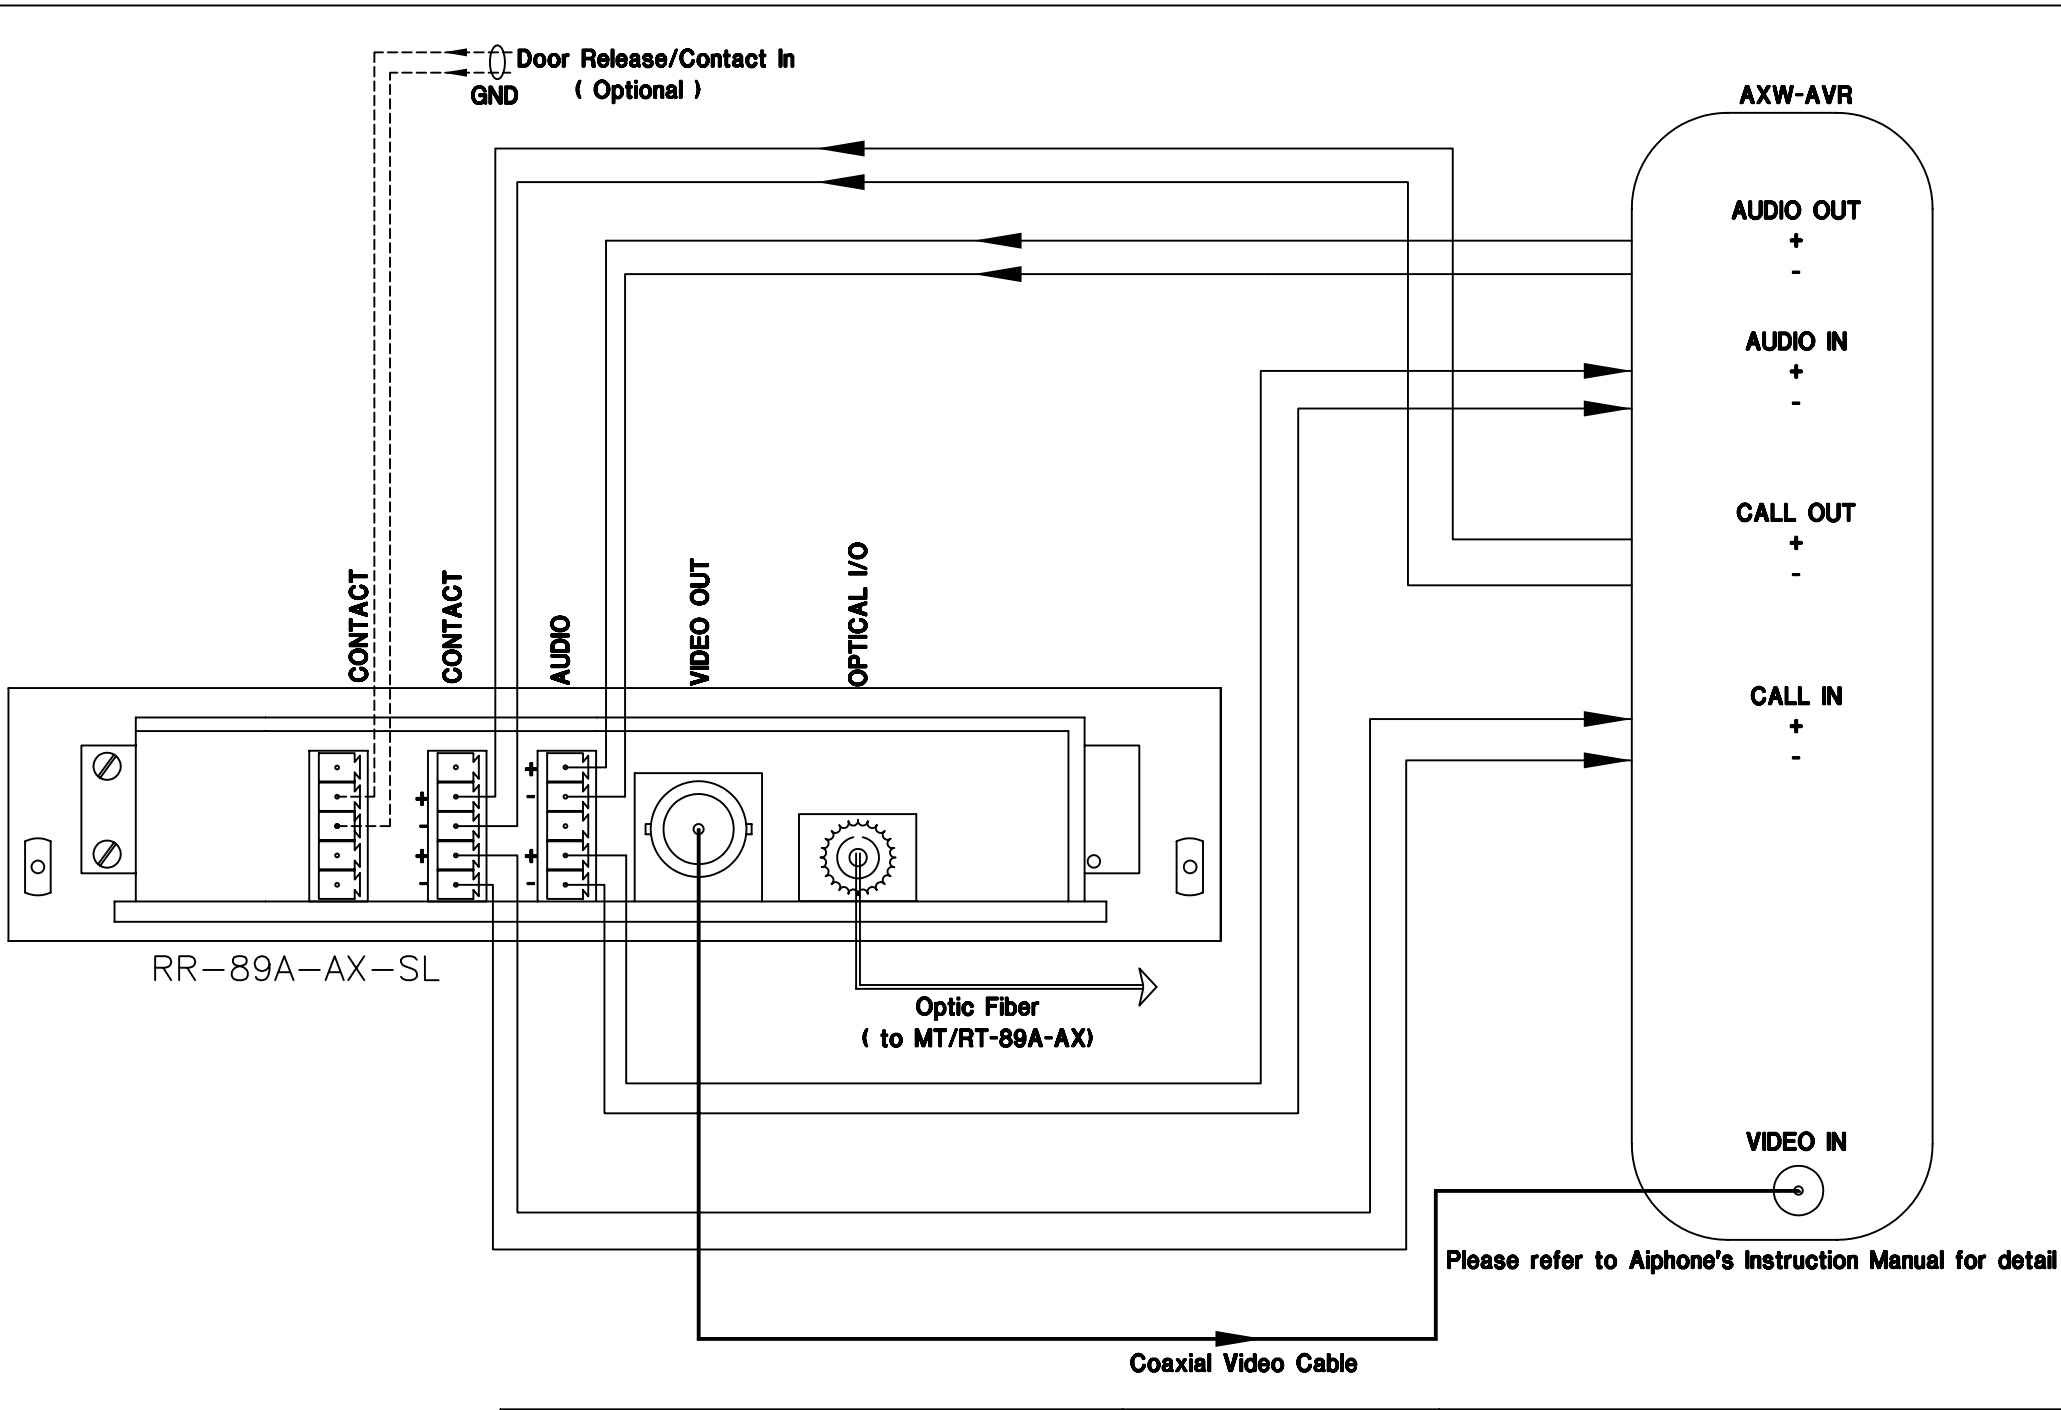

afi american fibertek 120 BELMONT DRIVE SOMERSET N.J.	DATE: 30 OCT 09	RR-89A-AX-SL CUSTOMER ASSEMBLY DRAWING			
	ACAD FN.: RR-89A-AX-SL CC				
	SCALE: NONE	DWG BY: CLQ	DWG. NO.:	SH. 2 OF 2	REV.: