

AUDIO TX/RX INDICATORS:

INDICATOR IS GREEN WHEN PROPER SIGNAL LEVEL IS PRESENT. OFF WHEN SIGNAL MISSING OR AT AN INCORRECT LEVEL.

CONTACT TX/RX INDICATORS:


INDICATOR IS GREEN WHEN CONTACT IS CLOSED. OFF WHEN CONTACT IS OPEN.


VLI - VIDEO LEVEL INDICATOR:

OLI - OPTICAL LEVEL INDICATOR:

SYNC - SYNC INDICATOR:

INDICATOR IS GREEN WHEN PROPER SIGNAL/LEVEL IS PRESENT. IT IS RED WHEN SIGNAL IS MISSING OR AT AN INCORRECT LEVEL.

 american fibertek 120 BELMONT DRIVE SOMERSET N.J.	DATE: 15 OCT 09		MR-89A-AX		
	ACAD FN.: MR-89A-AX CC		CUSTOMER ASSEMBLY DRAWING		
	SCALE: NONE	DWG BY: CLQ	DWG. NO.:	SH. 1 OF 2	REV.:

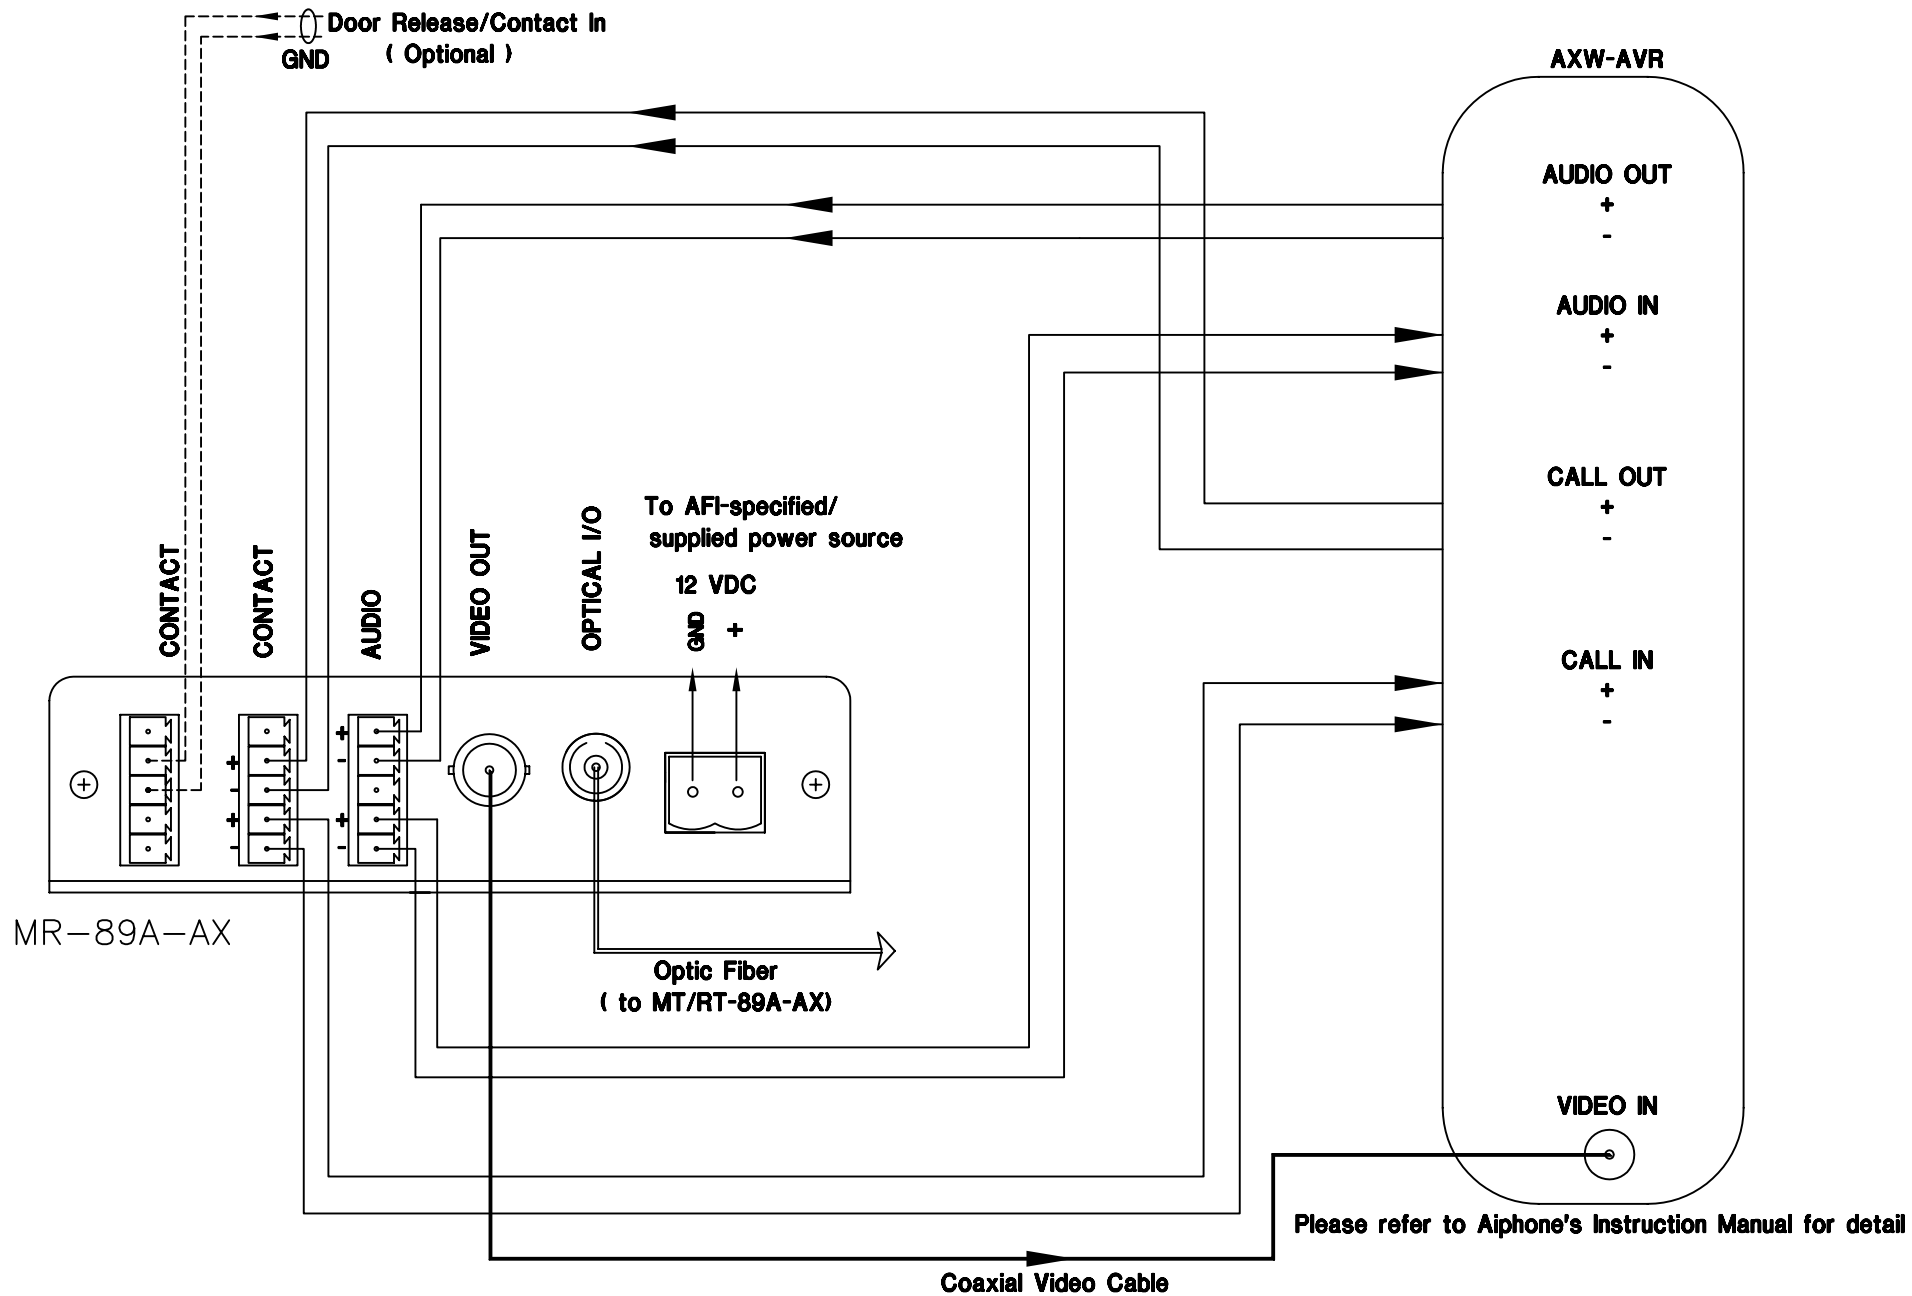

afi
american fibertek
120 BELMONT DRIVE SOMERSET N.J.

DATE: 26 OCT 09
ACAD FN.: MR-89A-AX CC
SCALE: NONE DWG BY: CLQ

MR-89A-AX
CUSTOMER ASSEMBLY DRAWING

DWG. NO.: SH. 2 OF 2 REV.: CHK.: *SK*