



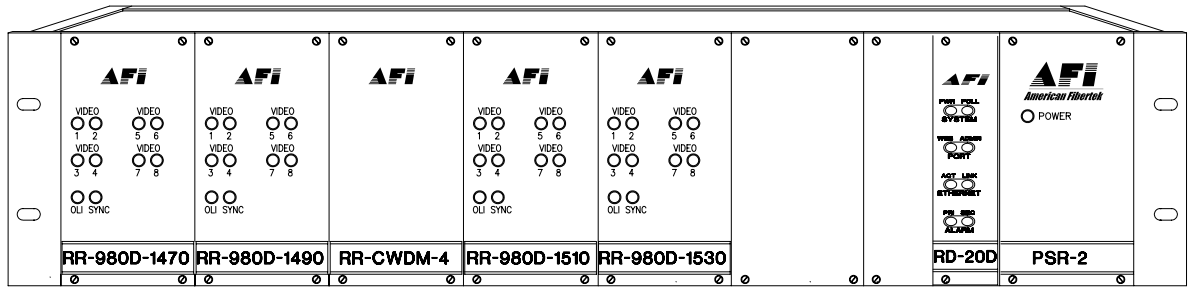

120 Belmont Drive
Somerset, NJ 08873-1204

American Fibertek

Phone: 732.302.0660 Fax: 732.302.0667

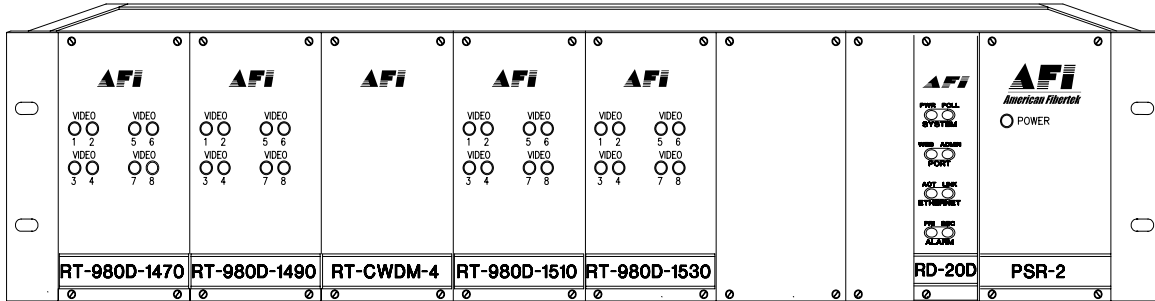


Instruction Manual

RT-93200D-SL

RR-93200D-SL

Thirty Two Channel Video Multiplexer
With Remote Diagnostic Interface

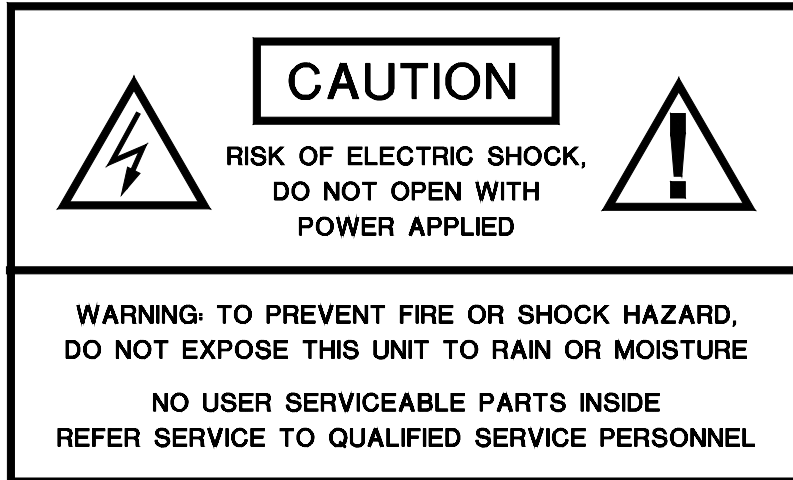

INSTALLATION

THIS INSTALLATION SHOULD BE MADE BY A QUALIFIED SERVICE PERSON AND SHOULD CONFORM TO THE NATIONAL ELECTRICAL CODE, ANSI/NFPA 70 AND LOCAL CODES.

Table of Contents

Functional Description3

RT-93200D-SL Components.....3

RR-93200D-SL Components4

Power Connections5

Fiber Connections5

Video Input / Output Connections5

RT-980D Series Status LED Indicators.....6

RR-980D Series Status LED Indicators7

Warranty / Service Information8

INSTALLATION AND OPERATION INSTRUCTIONS

INTRODUCTION

Thank you for purchasing your American Fibertek Series 93200D-SL singlemode thirty two channel video multiplexer. Please take a few minutes to read these installation instructions in order to obtain the maximum performance from this product.

FUNCTIONAL DESCRIPTION

The 93200D-SL Series units operate as a transmitter / receiver pair for the digital transmission of thirty two simultaneous NTSC or PAL video signals over one singlemode fiber optic cable.

The RT-93200D-SL transmitter accepts up to thirty two video inputs in four groups containing eight videos each. The eight videos from each group are multiplexed into a high speed serial data stream. The first group's serial data stream modulates a laser at 1470nm wavelength. The second group's serial data stream modulates a laser at 1490nm wavelength. This pattern is repeated for group's three and four using wavelengths 1510nm and 1530nm respectively. A Course Wave Division Multiplexer (CWDM) combines these four wavelengths onto a single optical output port for connection to the fiber transmission system. Correspondingly, the RR-93200D-SL receiver converts the optical signal to thirty two independent video outputs.

The 93200D-SL Series product is designed to operate over an optical loss budget range of 0dB to 21dB on 9um singlemode fiber. Refer to the product specification sheet for additional performance data.


The RD-20D diagnostic card in each subrack enables the status of the RT-93200D-SL and the RR-93200D-SL components to be monitored locally or via a remote PC. Please refer to the RD-20D installation manual for set up and operating instructions for remote status monitoring.

RT-93200D-SL COMPONENTS

The RT-93200D-SL consists of the following components:

1) RT-980D-1470	1) RT-980D-1530	1) SR-20D	1) BPS-1
1) RT-980D-1490	4) PCSC/UPC-0.3	1) PSR-2	1) BPS-2
1) RT-980D-1510	1) RT-CWDM-4	1) RD-20D	

The individual 980D series video rack cards that make up the RT-93200D-SL are combined in a rack mount configuration using the SR-20D subrack. Please refer to the instruction manuals for the SR-20D and the PSR-2 for information on the installation of the subrack with its power supply. The individual 980D series rack cards can slide into any two adjacent open slots in the SR-20D subrack, however, the recommended configuration is shown on the next page. Use a small screwdriver to push and lock the four ¼ turn fasteners into place.

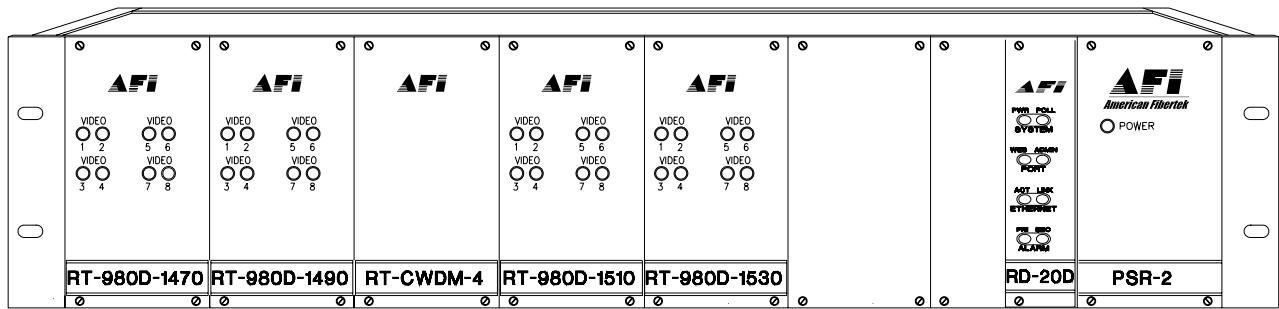


RT-93200D-SL

RR-93200D-SL COMPONENTS

The RR-93200D-SL consists of the following components:

- | | | | |
|-----------------|-----------------|-----------|----------|
| 1) RR-980D-1470 | 1) RR-980D-1530 | 1) SR-20D | 1) BPS-1 |
| 1) RR-980D-1490 | 4) PCSC/UPC-0.3 | 1) PSR-2 | 1) BPS-2 |
| 1) RR-980D-1510 | 1) RR-CWDM-4 | 1) RD-20D | |

The individual 980D series video rack cards that make up the RR-93200D-SL are installed in a manner similar to the RT-93200D-SL (see drawing below). The Multi-Channel Digital Video CWDM that optically demultiplexes the four video rack cards used in the RR-93200D-SL is labeled RR-CWDM-4. Mounting procedures and recommendations should follow those used for the RT-93200D-SL.

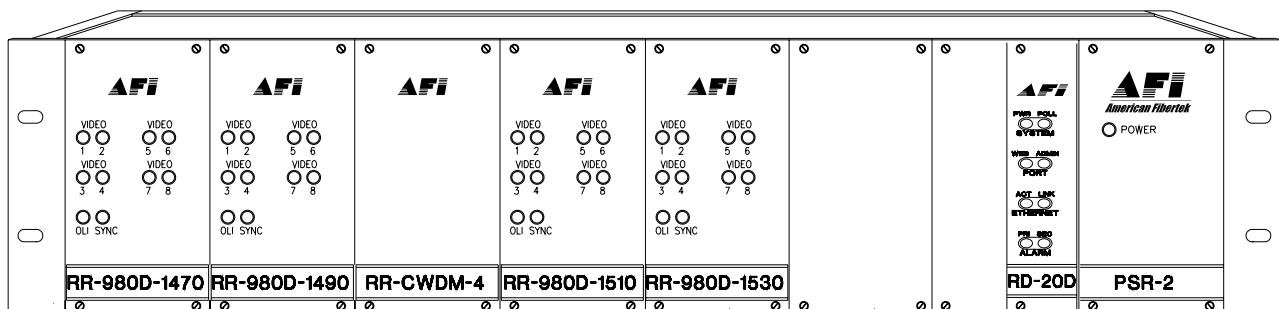

RR-93200D-SL

POWER SOURCE


Power to the 980D series rack cards and the RD-20D rack card is supplied by the subrack. Please refer to the SR-20D and PSR-2 instructions for further details.

POWER CONNECTIONS

Power is supplied to the individual 980D series units and the RD-20D via a four finger backplane connector. The individual components can be inserted into the subrack or removed from the subrack with power applied to the backplane. Please refer to the SR-20D and PSR-2 instructions for details.

FIBER CONNECTIONS

The fiber optic connection to the user's infrastructure is made via a SC connector located at the back of the CWDM unit. Be sure to allow sufficient room for the required minimum bend radius of the fiber cable used. SC patch cords are supplied for the intra-fiber connections between the CWDM and each of the 980D series units. The wavelength listed for each port on the CWDM must correlate with the wavelength listed on the 980D series unit to which that port is attached.

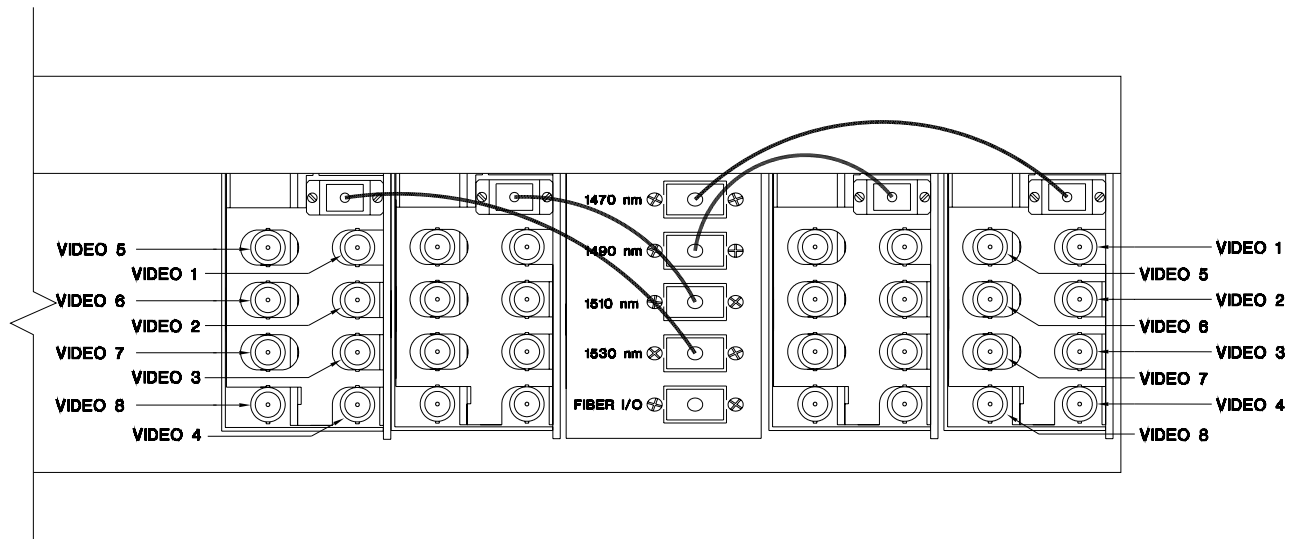


VIDEO INPUT / OUTPUT CONNECTIONS

Video input and output connections are located on the rear of the 980D series units. A BNC connector is provided for each channel. The video inputs are connected to an appropriate 75 Ω baseband video source such as a camera or a video recorder output. The 75 Ω video outputs can be looped through typical baseband video inputs of switchers, recorders and other equipment as required. For proper operation, the outputs must be terminated with 75 Ω . For optimum performance the video cables should be the shortest length of coax practical.

The location of a video input to the RT-93200D-SL will be mirrored as a video output at the RR-93200D-SL. For example, the Video 2 input on the RT-980D-1490 will become the Video 2 output on the RR-980D-1490 after traveling across the fiber infrastructure.

RT-980D SERIES STATUS INDICATORS

Each of the RT-980D series transmitters provides the following front panel LED status indicators to aid in installation and troubleshooting:

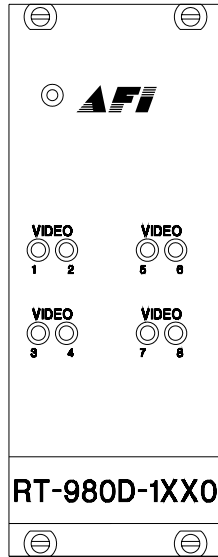


VIDEO 1 THROUGH VIDEO 8

A bi-color LED indicator is provided for each of the eight video inputs to the RT-980D series transmitters. Video status and AC power associated with each of these LEDs is summarized below.

Video Presence LED	AC Power Status	Video Status
Green	On	Proper Input Video Present
Red	On	Input Video Not Detected
Off	Off	Check Power Supply Input

RR-980 SERIES STATUS INDICATORS

Each of the RR-980 series receivers provides the following front panel LED status indicators to aid in installation and troubleshooting:

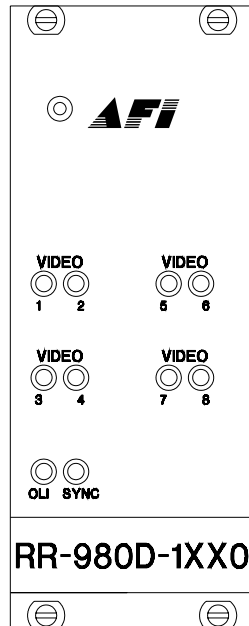

VIDEO 1 THROUGH VIDEO 8

A bi-color LED indicator is provided for each of the eight video outputs from the RR-980D series receivers. Video status associated with each of these LEDs is summarized below.

Video Presence LED	Video Status
Green	Proper Output Video Present
Red	Output Video Not Detected

OLI

A bi-color LED indicator monitors the power of the optical input signal that is being received at the RR-980 series unit from video channels one through eight of its corresponding RT-980D series unit. AC power and optical input status associated with this LED are summarized below.

Optical Level Indicator	AC Power Status	Optical Status
Green	On	Proper Optical Input Power Present
Red	On	Optical Input Not Detected
Off	Off	Check Power Supply Input

SYNC

A bi-color LED indicator is provided to monitor the proper serialization of the electrical video data stream through the RR-980 series unit. Each group of eight videos has its own SYNC indicator. Sync status associated with this LED is summarized below.

Sync LED	Sync Status
Green	Proper Data Stream Serialization Present
Red	Data Stream Serialization Not Detected

**This unit complies with 21 CFR
1040.10 and 1040.11**

LIFETIME WARRANTY INFORMATION

American Fibertek, Inc warrants that at the time of delivery the products delivered will be free of defects in materials and workmanship. Defective products will be repaired or replaced at the exclusive option of American Fibertek. A Return Material Authorization (RMA) number is required to send the products back in case of return. All returns must be shipped prepaid. This warranty is void if the products have been tampered with. This warranty shall be construed in accordance with New Jersey law and the courts of New Jersey shall have exclusive jurisdiction over this contract. **EXCEPT FOR THE FOREGOING WARRANTY, THERE IS NO WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR OTHERWISE, EXPRESSED OR IMPLIED, WHICH EXTENDS BEYOND THE WARRANTY SET FORTH IN THIS AGREEMENT.** In any event, American Fibertek will not be responsible or liable for contingent, consequential, or incidental damages. No agreement or understanding, expressed or implied, except as set forth in this warranty, will be binding upon American Fibertek unless in writing, signed by a duly authorized officer of American Fibertek.

SERVICE INFORMATION

There are no user serviceable parts inside the unit.

In the event that service is required to this unit, please direct all inquiries to:

American Fibertek, Inc.
120 Belmont Drive
Somerset, NJ 08873

Phone: (877) 234-7200
Phone: (732) 302-0660
FAX (732) 302-0667

E-mail: techinfo@americanfibertek.com