


PROPER SIGNAL LEVEL IS PRESENT. OFF WHEN SIGNAL IS MISSING OR AT AN INCORRECT LEVEL.

AUDIO TX/RX INDICATORS: GREEN WHEN DATA OR CONTACT ACTIVITY IS PRESENT. OFF WHEN NO DATA OR CONTACT ACTIVITY IS PRESENT.

VLI - VIDEO LEVEL INDICATORS: OLI — OPTICAL LEVEL INDICATOR GREEN WHEN PROPER SIGNALS/LEVELS ARE PRESENT. RED WHEN SIGNALS ARE MISSING OR AT INCORRECT LEVELS.

1	2	3	4	5	
OFF	OFF			OFF	RS485-4W (FACTORY SHIPPED)
ON	OFF			OFF	RS485-2W
OFF	ON			OFF	RS422/MANCHESTER
ON	ON			OFF	RS232
		OFF	OFF	OFF	
CHANI	NEL 1	CHANI	NEL 2	NOT USED	

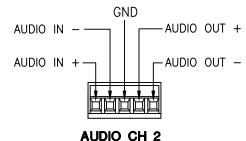

RS485/RS422 OUT +

RS485/RS422 OUT -

└RS232 OUT

		a f	ihertek	
120	BELMONT	DRIVE	SOMERSET	N.J.

DAIL:						
05	)	JAN		16		
ACAD FN.:						
RT-94P58(SL) CC						
SCALE:		DWG	B,	Y:		_
NONE				BLE	3	

RT-94P58SL					
CUSTOMER	ASSEMBLY	DRAWING			

DWG. NO.: REV.: CHK.: SH. OF