



AUDIO TX/RX INDICATORS:  
 INDICATOR IS GREEN WHEN  
 PROPER SIGNAL LEVEL IS  
 PRESENT. OFF WHEN SIGNAL  
 MISSING OR AT AN INCORRECT  
 LEVEL.

OLI - OPTICAL LEVEL INDICATOR:  
SYNC - SYNC INDICATOR:  
 INDICATOR IS GREEN WHEN  
 PROPER SIGNAL/LEVEL IS  
 PRESENT. IT IS RED WHEN  
 SIGNAL IS MISSING OR AT  
 AN INCORRECT LEVEL.

 120 BELMONT DRIVE SOMERSET N.J.	DATE: 04 APR 13		MT-9P88(SL)		
	ACAD FN.: MT-9P88(SL) CC		CUSTOMER ASSEMBLY DRAWING		
	SCALE: NONE	DWG BY: BLB	DWG. NO.:	SH. OF	REV.: