


AUDIO TX/RX INDICATORS:
 INDICATOR IS GREEN WHEN PROPER SIGNAL LEVEL IS PRESENT. OFF WHEN SIGNAL MISSING OR AT AN INCORRECT LEVEL.

OLI - OPTICAL LEVEL INDICATOR:
SYNC - SYNC INDICATOR:
 INDICATOR IS GREEN WHEN PROPER SIGNAL/LEVEL IS PRESENT. IT IS RED WHEN SIGNAL IS MISSING OR AT AN INCORRECT LEVEL.

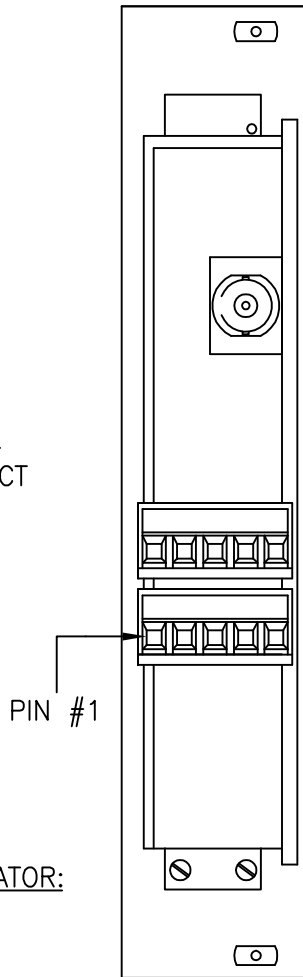


FIBER I/O


CH1 AUDIO

CH2 AUDIO

PIN #1

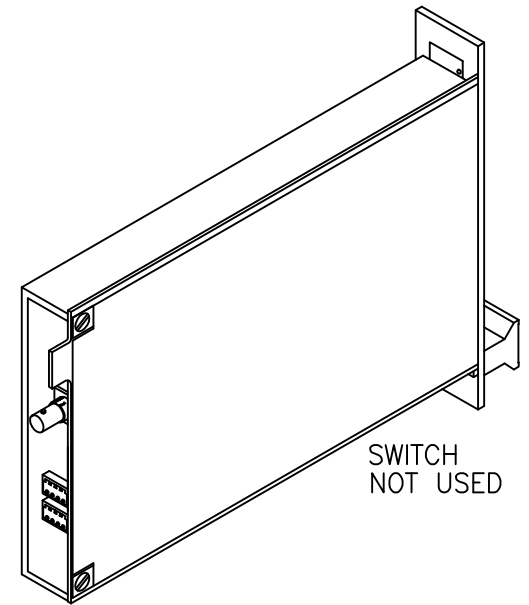

SWITCH NOT USED

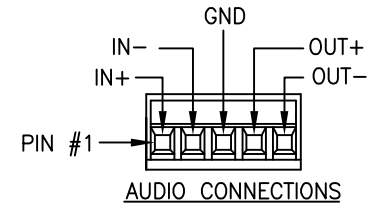

AUDIO CONNECTIONS

 afi american fibertek 120 BELMONT DRIVE SOMERSET N.J.	DATE: 04 APR 13		RR-9P88(SL)		
	ACAD FN.: RR-9P88(SL) CC		CUSTOMER ASSEMBLY DRAWING		
	SCALE: NONE	DWG BY: BLB	DWG. NO.:	SH. OF	REV.: