


AUDIO TX/RX INDICATORS:  
INDICATOR IS GREEN WHEN PROPER SIGNAL LEVEL IS PRESENT. OFF WHEN SIGNAL IS MISSING OR AT AN INCORRECT LEVEL.


OLI - OPTICAL LEVEL INDICATOR:  
SYNC - SYNC INDICATOR:  
INDICATOR IS GREEN WHEN PROPER SIGNAL/LEVEL IS PRESENT. IT IS RED WHEN SIGNAL IS MISSING OR AT AN INCORRECT LEVEL.

CONTACT TX/RX INDICATOR:  
INDICATOR IS GREEN WHEN CONTACT IS CLOSED. OFF WHEN CONTACT IS OPEN.

**AUDIO CONNECTIONS**

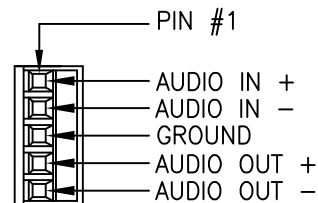

**CONTACT CONNECTIONS**

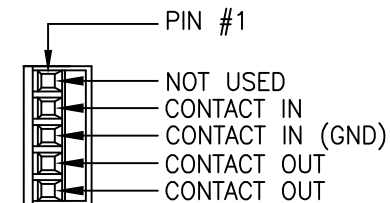

 120 BELMONT DRIVE SOMERSET N.J.	DATE: 09 APR 13		MR-9P89(SL) CUSTOMER ASSEMBLY DRAWING			
	ACAD FN.: MR-9P89(SL) CC		SCALE: NONE	DWG BY: BLB	DWG. NO.:	SH. OF
					REV.:	CHK.: <i>SK</i>