


AUDIO TX/RX INDICATORS:  
INDICATOR IS GREEN WHEN PROPER SIGNAL LEVEL IS PRESENT. OFF WHEN SIGNAL MISSING OR AT AN INCORRECT LEVEL.

CONTACT TX/RX INDICATOR:  
INDICATOR IS GREEN WHEN CONTACT IS CLOSED. OFF WHEN CONTACT IS OPEN.




OLI – OPTICAL LEVEL INDICATOR:  
SYNC – SYNC INDICATOR:  
INDICATOR IS GREEN WHEN PROPER SIGNAL/LEVEL IS PRESENT. IT IS RED WHEN SIGNAL IS MISSING OR AT AN INCORRECT LEVEL.

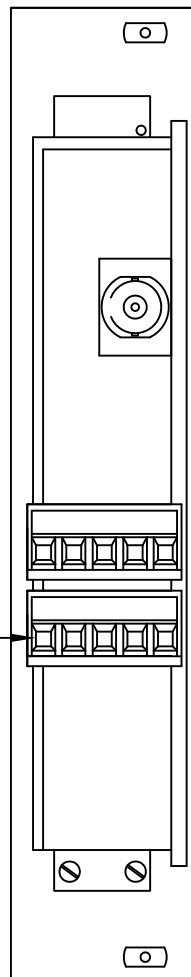

OPTICAL I/O

CH1 AUDIO

CH2 CONTACT

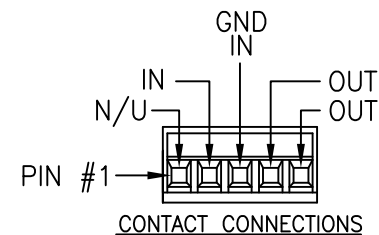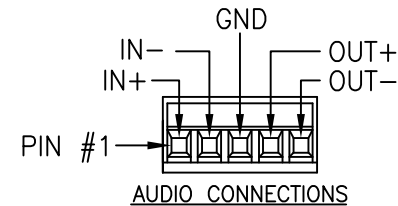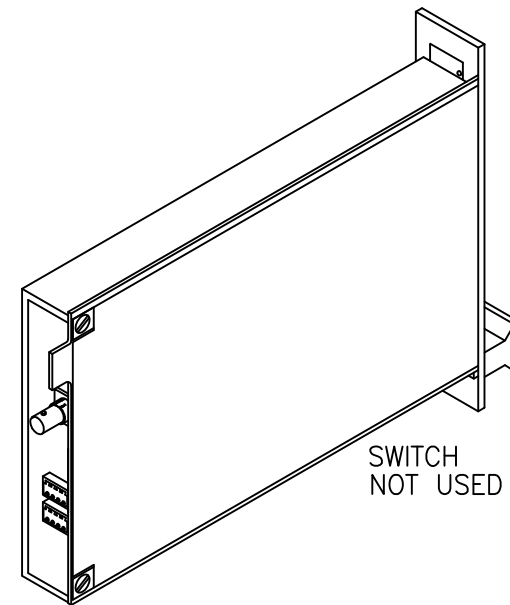

 <b>afi</b> american fibertek 120 BELMONT DRIVE SOMERSET N.J.	DATE: 09 AUG 13		RR-9P89(SL)		
	ACAD FN.: RR-9P89(SL) CC		CUSTOMER ASSEMBLY DRAWING		
	SCALE: NONE	DWG BY: JPK	DWG. NO.:	SH. OF	REV.: