


afi

120 Belmont Drive
Somerset, NJ 08873-1204


american fibertek Phone: 732.302.0660 Fax: 732.302.0667

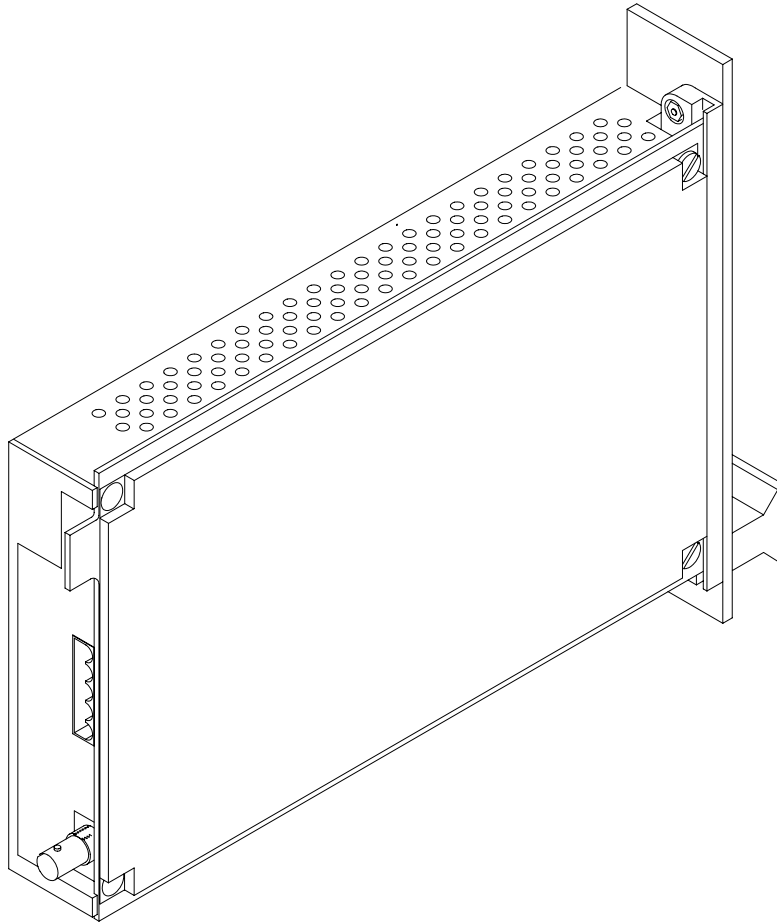

Instruction Manual

RR-0800

Bi-directional 4-Wire Audio

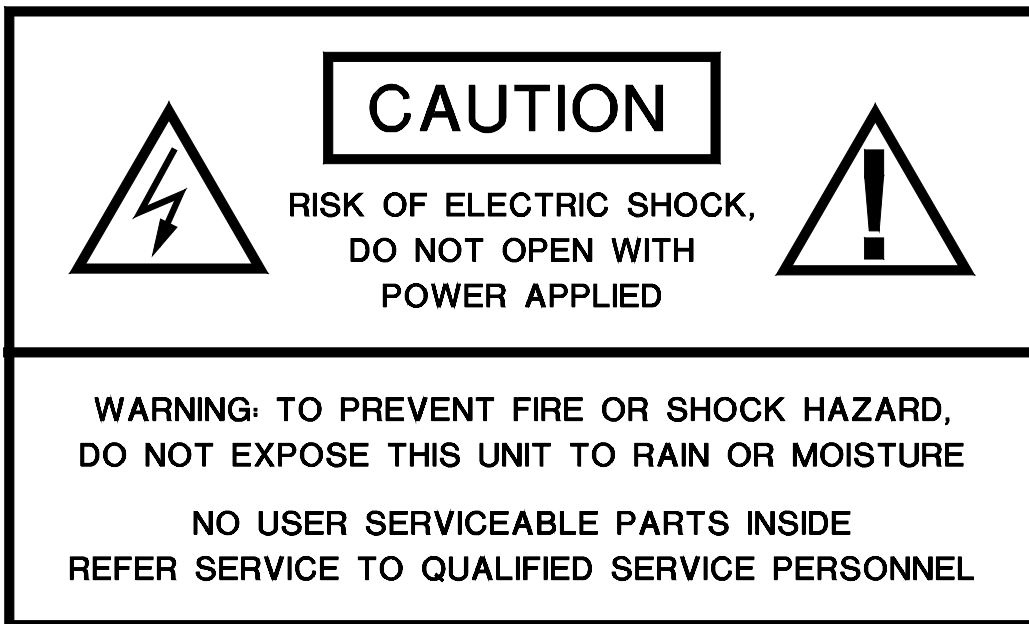

INSTALLATION AND OPERATION INSTRUCTIONS

INTRODUCTION

Thank you for purchasing your American Fibertek RR-0800 multimode bi-directional audio transceiver. Please take a few minutes to read these installation instructions in order to obtain the maximum performance from this product.

FUNCTIONAL DESCRIPTION

The RR-0800 operates as half of a transceiver pair for the transmission of one channel of bi-directional 4 wire audio. It is designed to operate with the MT-0800 or RT-0800 audio transceiver over a single multimode fiber optic cable.

The RR-0800 converts an audio input into an optical output using a 850 nm wavelength source. The RR-0800 also converts an optical input signal returning on the same fiber into a single audio output using an 1300 nm wavelength detector. The 0800 Series product is designed to operate over an optical loss budget range of 0 to 12 dB. The RR-0800 operates on 50 um or 62.5 um multimode fiber. Refer to the data sheets for detailed performance specifications.

This unit is designed for rack mounting in any of the three American Fibertek subracks available. The subrack model numbers are SR-20/2, SR-20R/1, and SR-20D/2. Slide in rack mounting and an LED indicator provide for easy installation and monitoring of optical and dc power.

The RR-0800 is designed for rack mounting only. For a modular stand alone version please see the MR-0800.

INSTALLATION

THIS INSTALLATION SHOULD BE MADE BY A QUALIFIED SERVICE PERSON AND SHOULD CONFORM TO THE NATIONAL ELECTRICAL CODE, ANSI/NFPA 70 AND LOCAL CODES.

The unit slides into any open slot in the SR-20 subrack. Use a small screwdriver to push and lock the two ¼ turn fasteners into place.

POWER SOURCE


Power to the unit is supplied by the subrack. Please refer to the SR-20 and PSR instructions for further details.

POWER CONNECTION

Power is supplied to the unit via a four finger backplane connector. The RR-0800 can be inserted into the subrack or removed from the subrack with power applied to the backplane.

FIBER CONNECTION

The fiber optic connection is made via a ST connector located on the back of the unit. Be sure to allow sufficient room for the required minimum bend radius of the fiber cable used.

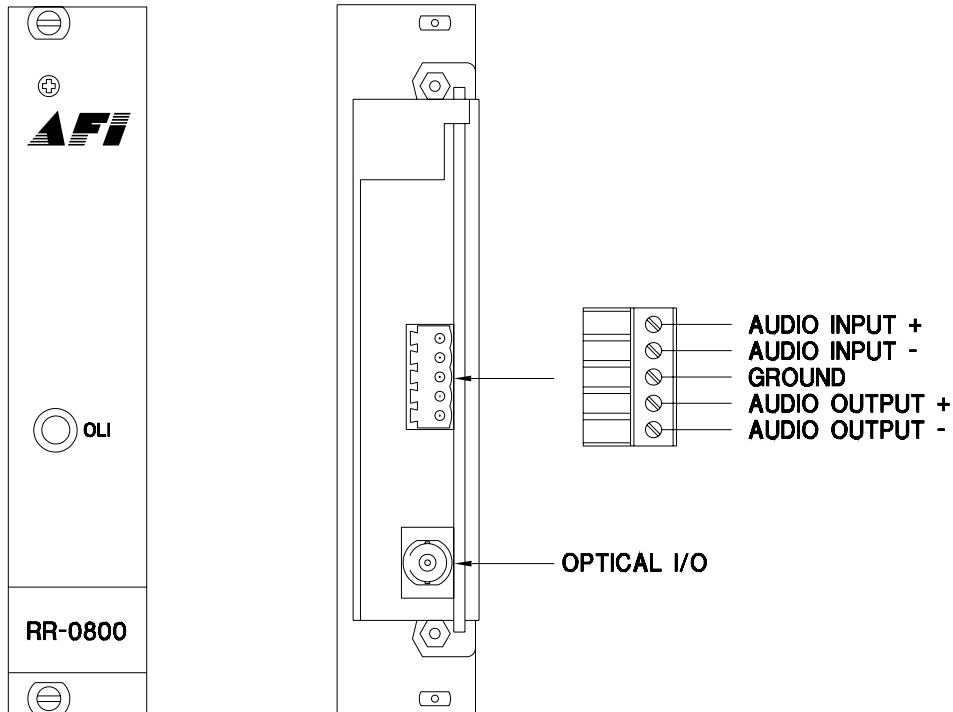

BALANCED AUDIO INPUT / OUTPUT CONNECTIONS

The audio input and output connections are made via a five pin terminal block on the back of the unit. The balanced audio is directly connected to the plus and minus terminals. The shield or earth wire is connected to the ground terminal. See the drawing above for proper orientation of the audio input and output wires. Please note that Audio In on the RR-0800 becomes Audio Out on the MT-0800 or RT-0800 after going across the fiber. The reverse flow follows the same orientation. For optimum performance the audio wires should be the shortest length practical.

UNBALANCED AUDIO INPUT CONNECTIONS

The audio input connections are made via a five pin terminal block on the back of the unit. To connect an unbalanced signal to the input, the audio signal is connected to the plus input. The shield or ground wire is connected to both the minus and the ground terminals. When used in the unbalanced configuration, there will be a loss of -6dB at the output of the corresponding fiber transceiver. See the drawing above for proper orientation of the audio input wires. Please note that Audio In on the RR-0800 becomes Audio Out on the MT-0800 or RT-0800 after going across the fiber. For optimum performance the audio wires should be the shortest length practical.

UNBALANCED AUDIO OUTPUT CONNECTIONS

The audio output connections are made via a five pin terminal connector on the back of the unit. To obtain an unbalanced output signal, only the audio out plus terminal and the ground terminal are used. The audio out minus terminal is not connected. When used in the unbalanced configuration, there will be a loss of -6dB relative to the audio signal input at the corresponding fiber transceiver. See the drawing above for proper orientation of the audio output wires. Please note that Audio Out on the RR-0800 originated as Audio In on the MT-0800 or RT-0800 before going across the fiber. For optimum performance the audio wires should be the shortest length practical.

AUDIO INPUT/ OUTPUT LEVELS

The ideal audio input level is 0dBm₆₀₀. (This is 1mW across the 600 Ohm input impedance.) On a voltage basis, this is equal to 0dBV or 2.19 Vp-p. Higher input levels will cause increased distortion. Up to +3dBm, the distortion will increase a small amount. Above this level the distortion will increase rapidly. Lower input signal levels will reduce the signal to noise ratio. In either balanced or unbalanced configuration, the input impedance is 600 Ohms.

The audio output signal appears on both the plus and minus terminals of this unit. Half of the signal appears on each output terminal. The two outputs are 180° out of phase. The balanced output impedance is 600 Ohms while the unbalanced output impedance is 300 Ohms. The output signal level will be half of the input level (-6dB) in an unbalanced configuration.

RR-0800 STATUS INDICATOR

The RR-0800 provides the following LED status indicator to aid in installation and troubleshooting:

OLI

A bi-color LED indicator monitors the optical input power of the audio signal that is being received at the RR-0800 from the MT-0800 or the RT-0800. Internal DC power and optical input status associated with this LED are summarized below.

Optical Level Indicator	DC Power Status	Optical Status
Green	On	Proper Optical Input Power Present
Red	On	Optical Input Not Detected
Off	Off	Check Power Supply

LIFETIME WARRANTY INFORMATION

American Fibertek, Inc warrants that at the time of delivery the products delivered will be free of defects in materials and workmanship. Defective products will be repaired or replaced at the exclusive option of American Fibertek. A Return Material Authorization (RMA) number is required to send the products back in case of return. All returns must be shipped prepaid. This warranty is void if the products have been tampered with. This warranty shall be construed in accordance with New Jersey law and the courts of New Jersey shall have exclusive jurisdiction over this contract. **EXCEPT FOR THE FOREGOING WARRANTY, THERE IS NO WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR OTHERWISE, EXPRESSED OR IMPLIED, WHICH EXTENDS BEYOND THE WARRANTY SET FORTH IN THIS AGREEMENT.** In any event, American Fibertek will not be responsible or liable for contingent, consequential, or incidental damages. No agreement or understanding, expressed or implied, except as set forth in this warranty, will be binding upon American Fibertek unless in writing, signed by a duly authorized officer of American Fibertek.

SERVICE INFORMATION

There are no user serviceable parts inside the unit.

In the event that service is required to this unit, please direct all inquiries to:

American Fibertek, Inc.
120 Belmont Drive
Somerset, NJ 08873

Phone: (877) 234-7200
Phone: (732) 302-0660
FAX (732) 302-0667

E-mail: techinfo@americanfibertek.com