




120 Belmont Drive
Somerset, NJ 08873-1204


American Fibertek

Phone: 732.302.0660 Fax: 732.302.0667

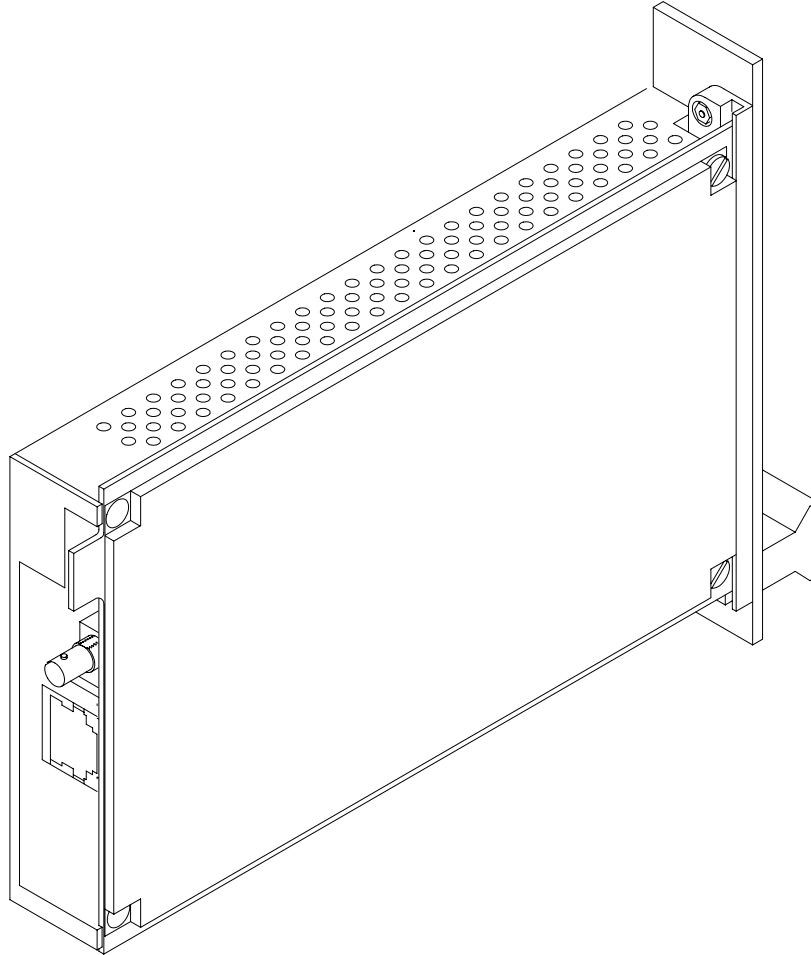

Instruction Manual

RRX-486 Bi-directional Panasonic PSD Data Transceiver

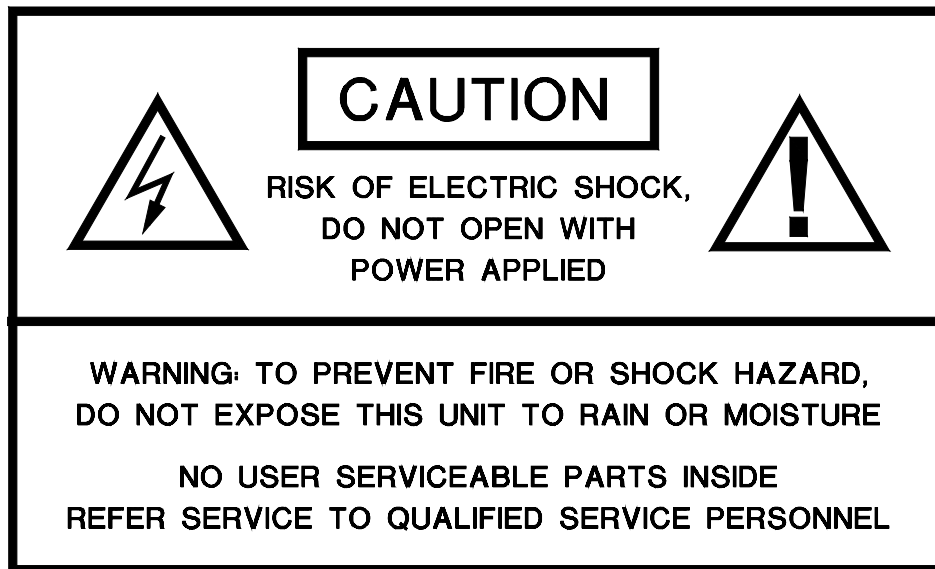

INSTALLATION AND OPERATION INSTRUCTIONS

INTRODUCTION

Thank you for purchasing your American Fibertek RRX-486 multimode Panasonic PSD data transceiver. Please take a few minutes to read these installation instructions in order to obtain the maximum performance from this product.

FUNCTIONAL DESCRIPTION

The RRX-486 operates as half of a transceiver pair for the transmission of bi-directional Panasonic PSD data. It is designed to operate with a MTX-486 or a RTX-486 data transceiver over a single multimode fiber optic cable.

The RRX-486 converts a single Panasonic PSD data input into an optical fiber output using an 850 nm wavelength source. The RRX-486 also converts an optical Panasonic PSD data signal returning on the same fiber into an electronic Panasonic PSD data output using a 1300 nm wavelength detector. The 486 Series product is designed to operate over an optical loss budget range of 0 to 12 dB when used on 62.5 um multimode fiber. The RRX-486 will also operate on 50 um multimode fiber at a reduced loss budget range. Refer to the data sheets for detailed performance specifications.

This unit is designed for rack mounting in an American Fibertek subrack. The subrack model numbers are SR-20/2, SR-20D/2, and SR-20/R1. Slide in rack mounting and LED indicators provide for easy installation and monitoring of video and dc power.

The RRX-486 is designed for rack mounting only. For a modular stand alone version please see the MRX-486.

INSTALLATION

THIS INSTALLATION SHOULD BE MADE BY A QUALIFIED SERVICE PERSON AND SHOULD CONFORM TO THE NATIONAL ELECTRICAL CODE, ANSI/NFPA 70 AND LOCAL CODES.

The unit slides into any open slot in the SR-20 subrack. Use a small screwdriver to push and lock the two ¼ turn fasteners into place.

POWER SOURCE

Power to the unit is supplied by the subrack. Please refer to the SR-20 and PSR instructions for further details.

POWER CONNECTION


Power is supplied to the unit via a four finger backplane connector. The RRX-486 can be inserted into the subrack or removed from the subrack with power applied to the backplane.

FIBER INPUT / OUTPUT CONNECTION

The fiber optic connection is made via a ST connector located on the back of the unit. Be sure to allow sufficient room for the required minimum bend radius of the fiber cable used.

DATA INPUT / OUTPUT CONNECTION

The data input / output connection is made via a RJ12 connector on the back of the unit.

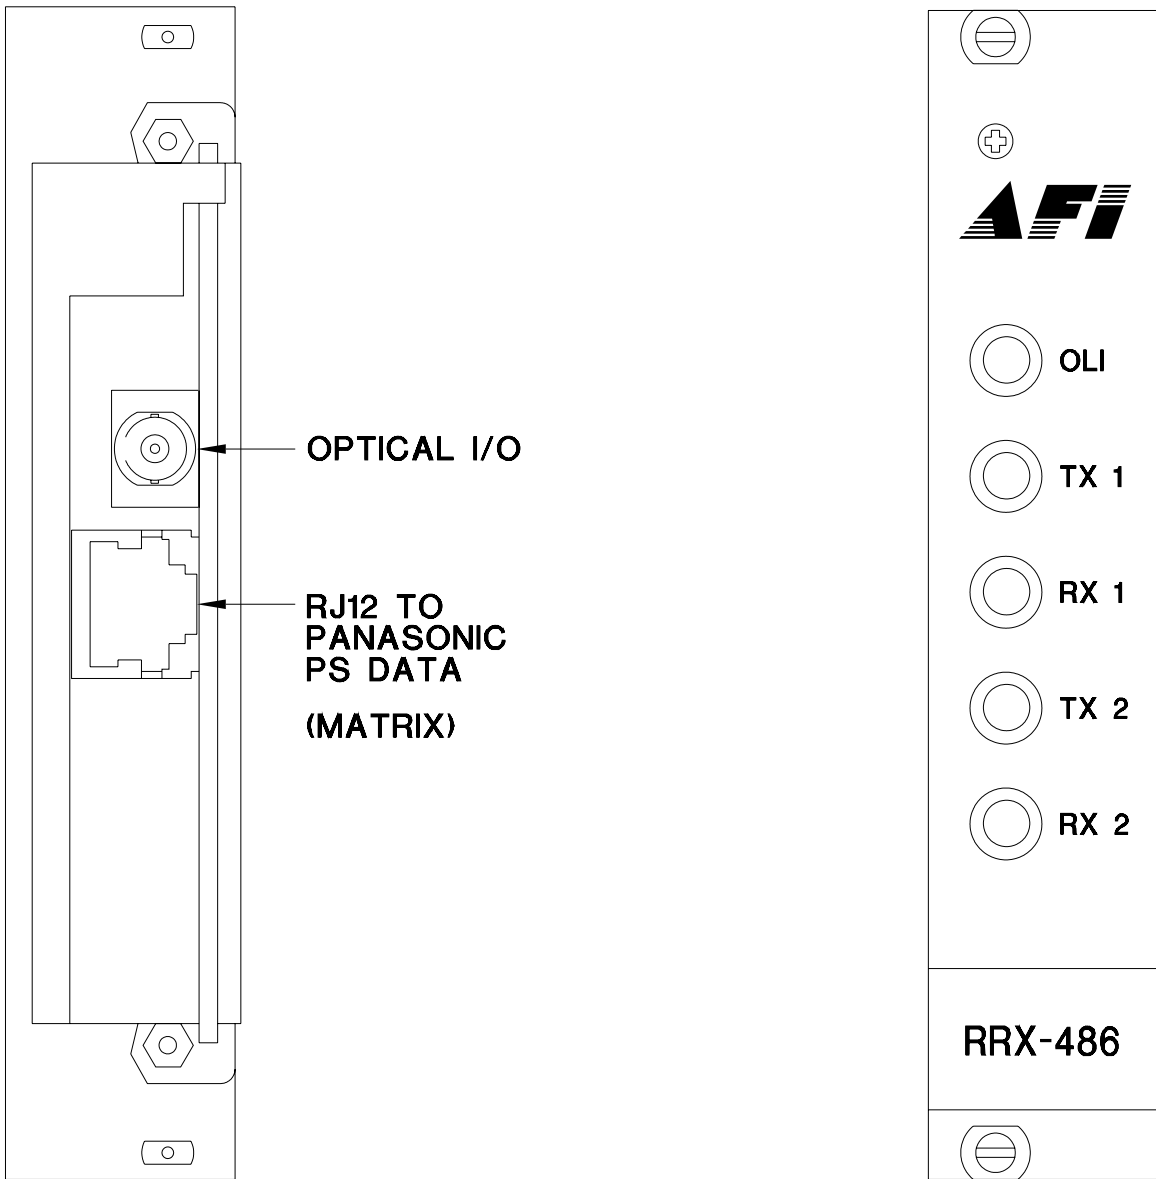

DATA CONFIGURATION

The RRX-486 is shipped from the factory in the Panasonic PSD data configuration. This unit is designed for use with Panasonic PSD data only. All internal switches should remain in the configuration set at the factory.

RRX-486 STATUS INDICATORS

The RRX-486 transmitter provides the following LED status indicators to aid in installation and troubleshooting:

OLI

A bi-color LED indicator monitors the optical input power of the data signal that is being received at the RRX-486 from the MTX-486 or the RTX-486. DC power and optical input status associated with this LED are summarized below.

Optical Level Indicator	DC Power Status	Optical Status
Green	On	Proper Optical Input Power Present
Red	On	Optical Input Not Detected
Off	Off	Check Power Supply

TX DATA

A red LED indicator is provided to monitor the PSD input data from the electrical interface, through the RRX-486, and out onto the fiber. The intensity of this indicator will vary with input data patterns, however in typical applications it will cycle on and off as data is transmitted. PSD data status associated with this LED is summarized below.

DATA TX LED	PSD Data Status
Red	Data Flow Present
Off	Data Flow Not Detected

DATA RX

A red LED indicator is provided to monitor the RS485 data coming in from the fiber, through the RRX-486, and out onto the electrical interface. The intensity of this indicator will vary with input data patterns, however in typical applications it will cycle on and off as data is received. PSD data status associated with this LED is summarized below.

DATA RX LED	PSD Data Status
Red	Data Flow Present
Off	Data Flow Not Detected

LIFETIME WARRANTY INFORMATION

American Fibertek, Inc warrants that at the time of delivery the products delivered will be free of defects in materials and workmanship. Defective products will be repaired or replaced at the exclusive option of American Fibertek. A Return Material Authorization (RMA) number is required to send the products back in case of return. All returns must be shipped prepaid. This warranty is void if the products have been tampered with. This warranty shall be construed in accordance with New Jersey law and the courts of New Jersey shall have exclusive jurisdiction over this contract. **EXCEPT FOR THE FOREGOING WARRANTY, THERE IS NO WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR OTHERWISE, EXPRESSED OR IMPLIED, WHICH EXTENDS BEYOND THE WARRANTY SET FORTH IN THIS AGREEMENT.** In any event, American Fibertek will not be responsible or liable for contingent, consequential, or incidental damages. No agreement or understanding, expressed or implied, except as set forth in this warranty, will be binding upon American Fibertek unless in writing, signed by a duly authorized officer of American Fibertek.

SERVICE INFORMATION

There are no user serviceable parts inside the unit.

In the event that service is required to this unit, please direct all inquiries to:

American Fibertek, Inc.
120 Belmont Drive
Somerset, NJ 08873

Phone: (877) 234-7200
Phone: (732) 302-0660
FAX (732) 302-0667

E-mail: techinfo@americanfibertek.com